

PROGRAMMING YOUR CTTV REMOTE

Programming Component (e.g., TV, VCR) Control

This remote can control up to four different components. Perform the following instructions for each component you want controlled:

Note: For TV/VCR Combo control see the next section.

1. Turn on a component (e.g., VCR) and if applicable, insert media (e.g., cassette or disc). NOTE: Please read steps 2-4 completely before proceeding. It is recommended to highlight or writing down the codes and device you wish to program before moving onto step 2.
2. On the remote, press a component key once (i.e., AUX, CBL, VCR, or TV). Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Use the manufacturer's codes to locate the type of component and brand name and then enter the first four-digit code for your component. If performed correctly, the LED will blink twice. NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.
4. Aim the remote at the component and press PWR once. It should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try searching for the code (see searching for your code). NOTE: If the device does not have a PWR key, press PLAY
5. Repeat steps 1 through 4 for each component you want the remote to control.

Programming TV/VCR Combo Control

Perform the following instructions to control a TV/VCR Combo:

1. Turn on the TV/VCR Combo and insert a video cassette. NOTE: Please read steps 2-4 completely before proceeding. We recommend writing down the code for the brand you wish to program before moving onto step 2.
2. On the remote, press VCR. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Use the Setup Codes For TV/VCR Combos to locate the brand name and then enter the first four-digit code for your component. If performed correctly, the LED will blink twice. NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.
4. Aim the remote at the component and press PWR once. It should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code). NOTE: If the device does not have a PWR key, Press PLAY.
5. If you've located a setup code that works, but it has a separate TV code, you'll also need to program it into the remote to access volume control as follows:
 - a. Press TV once. The LED will blink twice.

- b. Enter the TV code for your TV/VCR Combo. If correct, the LED will blink twice.

If there is no separate TV code listed, you will need to perform the following steps to access volume control:

- a. Press and hold SETUP until the LED blinks twice, then release SETUP.
- b. Enter 9 - 9 - 3. The LED will blink twice.
- c. Press VCR once, The LED will blink twice.

Searching For Your Code

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. On the remote, press TV once.
2. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter 9 - 9 - 1. The LED will blink twice.
4. Aim the remote control at the TV and slowly alternate between pressing PWR and TV. Stop when the TV turns off. NOTE: In the search mode, the remote will send IR codes from library to the selected device, starting with the most popular code first.
5. Press SETUP once to lock in the code.
6. To search for the codes of your other components, repeat steps 1 through 5, but substitute the appropriate key (i.e., AUX, CBL, or VCR) for the (Auxiliary, Cable, or VCR) component you are searching for.

Checking The Codes

If you have set up the remote using the Searching For Your Code procedure you may need to find out which four digit code is operating your equipment.

For example, to find out which code is operating your TV:

1. On the remote, press TV once.
2. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter 9 - 9 - 0. The LED will blink twice.
4. To view the code for the first digit press 1 once. Wait 3 seconds, count the LED blinks (e.g., 3 blinks = 3) and write down the number. NOTE: If a code digit is "0", the LED will not blink.
5. Repeat step 4 three more times for remaining digits, Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.
6. To check for the codes of your other components, repeat steps 1 through 5, but subject the appropriate.